


Thermostrip® DL Dishwasher Temperature Labels


Surface Temperature Disinfection Indicator



Thermostrip® DL is a self-adhering and waterproof color-changing label that measures the surface temperature of dishware in dish washing machines. Using Thermostrip® DL on a dish surface with each wash cycle will provide a record that the proper sanitation temperature has been reached.

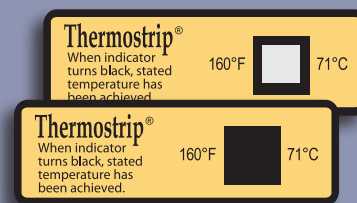

Actual Size

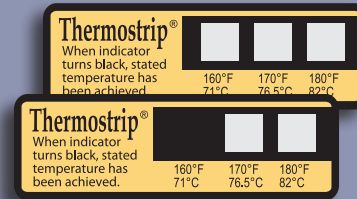

Waterproof Irreversible Labels provide proof that sanitizing temperature has been reached.

- Single or Three temperature point label
- ½" × 1¾"
- Labels change from white to black permanently when temperature has been attained
- Adhesive backed
- Attach to dishwasher tray/carrier
- Remove and retain as a permanent record of temperature attained
- Proof for HACCP Compliance
- Accurate to ± 1°C of rated temperature

P9001-24	Single Temperature Point Label	140°F/60°C	½" × 1¾"
P9007-24	Single Temperature Point Label	160°F/71°C	½" × 1¾"
P9009-24	Single Temperature Point Label	180°F/82°C	½" × 1¾"
P9002-24	Single Temperature Point Write-on Label	170°F/76.5°C	½" × 1¾"
P9003-16	Three Temperature Point Label	150° 65.5° 160° 71° 170°F 76.5°C	½" × 1¾"
P9008-16	Three Temperature Point Label	160° 71° 170° 76.5° 180°F 82°C	½" × 1¾"

Section 4.7 of the Food Code calls for measuring sanitized food contact surfaces and utensils by an irreversible registering temperature indicator.

How to Use

- **Attach to the thickest clean dry dish**
- Place labeled dish/utensil in dishwasher and run dishwasher
- Read label – Label will turn from white to black when surface temperature reaches rated temperature
- Remove label and attach to dishwasher documentation